



BFRich 2000 Series Patio Door

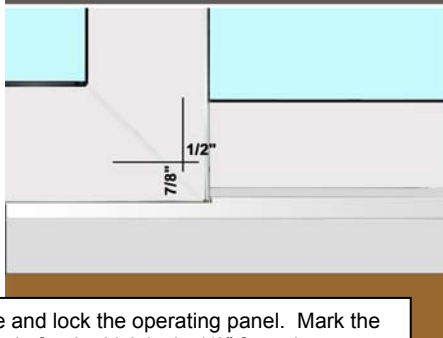


Close and lock the operating panel. Mark the first hole for the kick lock. 1/2" from the interlock side edge and 7/8" from the bottom



Mark the additional 3 holes then drill a 3/32" pilot hole and install Kick-Lock using spacer and four #8 x 1" pan head screws.

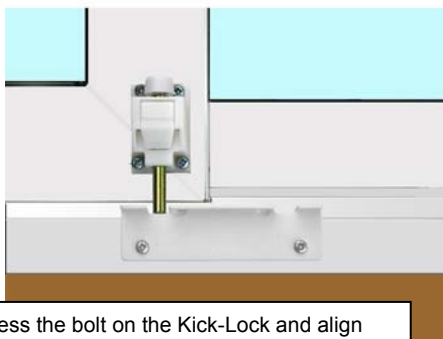

Depress the bolt on the Kick-Lock and align the keeper so it allows the bolt to engage. Mark the holes in the keeper then using a 3/32" drill bit, drill a pilot hole and attach the keeper using two #8 x 1" pan head screws.

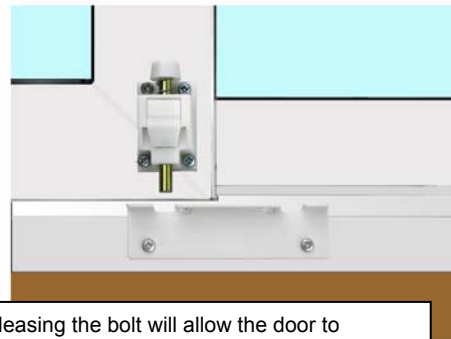

Releasing the bolt will allow the door to function in normal mode. The door can also be opened 3" and the Kick-Lock bolt depressed into the second keeper notch to allow for ventilation.