


# Double-Hung Bottom Sash Egress

<u>Product</u>	<u>Balance(s)</u>	<u>Width Clear Opening</u>	<u>Height Clear Opening</u>
Elite	1	Width minus 5.375	Height divide by 2 minus 6.75
Elite	2	Width minus 5.375	Height divide by 2 minus 7.9375
Elite	3	Width minus 5.375	Height divide by 2 minus 9.125
Elite	4	Width minus 5.375	Height divide by 2 minus 10.3125
Cabernet	1	Width minus 5.375	Height divide by 2 minus 6.75
Cabernet	2	Width minus 5.375	Height divide by 2 minus 7.9375
Cabernet	3	Width minus 5.375	Height divide by 2 minus 9.125
Cabernet	4	Width minus 5.375	Height divide by 2 minus 10.3125
Vintage	1 or 2	Width minus 4.25	Height divide by 2 minus 6.5625
Vintage	3	Width minus 4.25	Height divide by 2 minus 7.8125
Vintage	4	Width minus 4.25	Height divide by 2 minus 9
Woodbridge	All	Width minus 4.125	Height divide by 2 minus 4.75
Horizon	1 or 2	Width minus 5	Height divide by 2 minus 6.6875
Horizon	3	Width minus 5	Height divide by 2 minus 7.875
Horizon	4	Width minus 5	Height divide by 2 minus 9.0625
SH-1000	All	Width minus 5.125	Height divide by 2 minus 4.625
Rich Vinyl	1 or 2	Width minus 4.125	Height divide by 2 minus 7.25
Rich Vinyl	3	Width minus 4.125	Height divide by 2 minus 8.4375
Rich Vinyl	4	Width minus 4.125	Height divide by 2 minus 9.625

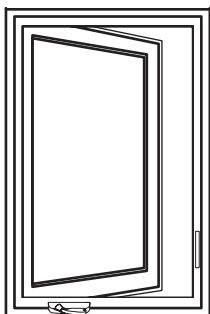

# Casement Egress

<u>Casement</u>	<u>Width Clear Opening</u>	<u>Height Clear Opening</u>
Standard Hardware	Width minus 11.5	Height minus 4.75
Egress Hardware	Width minus 7.25	Height minus 4.75

To determine egress area take (Width Clear Opening X Height Clear Opening) then divide by 144 to get square footage.  
Egress requirements: Clear opening width of 20" - Clear opening height of 24" - Total Clear Opening of 5.7 square feet.